


Refill Instructions: Epson C80, C82, 2200, 960 Cartridges



1 1/2" Needle

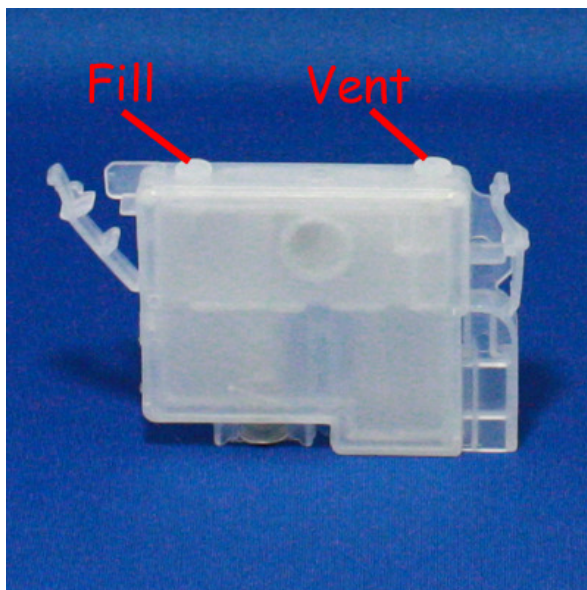

Clear MIS C80, C82, 2200, 2100, 960 Empty Cartridge



Bottom Fill Adapter

Refill:

1. Install a needle onto a syringe. It is a twist lock connection. Load the syringe with 12 ml of ink. Make sure it is the right color or shade for the cartridge you are working on.
2. There is a hole in the top of the cartridge to gain access to the reservoir. Carefully remove the plug and add ink, using the syringe, until the reservoir is almost full. It should take 12 to 13 ml of ink. Be sure you are filling into the reservoir section.
3. Next, remove the needle from the end of syringe and attach the bottom fill adapter (MISBADPT). Draw out 1 cc of ink from the exit port to remove any trapped air.
4. When you draw ink out, make sure the plug in the reservoir is not installed yet. The cartridge is now primed. Be careful not to spill any ink out of the open reservoir hole.

5. Install the plug in the top of the reservoir. It must seal absolutely **AIR TIGHT**. If the plug is damaged, get a new one. Be sure to remove the foil covering the vent hole. Some carts come with foil, some don't. The vent hole on top of the sponge section must be open or the cartridge will not work.
6. Install a chip on the cart and give it a try. If the chip is not new, reset with our SK168 Resetter. We have replacement chips available if you need them.

Caution: If you put a cart without a chip on it in printer, it will destroy the contacts that read the chip when you remove it. **SO DON'T DO THIS**. Always check the carts for presence of chip before installing. Make sure the chip is not loose and can not fall off.

You will need fresh chips or a SK168 Chip Resetter to make carts work. Chips are color position sensitive, don't mix up.