


## Chip Replacement Instructions

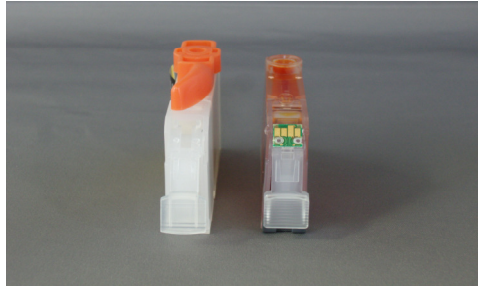


**\*WARNING:** DO NOT PUT A CARTRIDGE WITHOUT A CHIP ON IT INTO THE PRINTER - IT WILL CAUSE FATAL DAMAGE TO PRINTER!!!

The new Canon cartridges have chips on them. To use an aftermarket cartridge, you must remove the chip from your OEM cartridge and install it on the aftermarket cartridge. Note that these chip are color position specific. If you have an old cartridge, you can reset the chip and return it to the Full condition. Use the [SK155 chip resetter](#). The SK155 will only work on standard type chip, not on aftermarket chips.


### Procedure:

1. To get the chip off, use a single sided razor blade and remove excess plastic from the side post holding the chip in place. Only remove the plastic from one post.

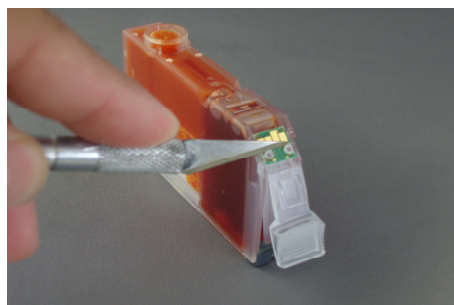

2. Use a knife blade or thin screwdriver blade to pry chip off of cartridge.

3. Slide new chip on to the posts on the new cartridge. Take advantage of the U channel in the chip. When the chip is in place, push the posts down to retain the chip.

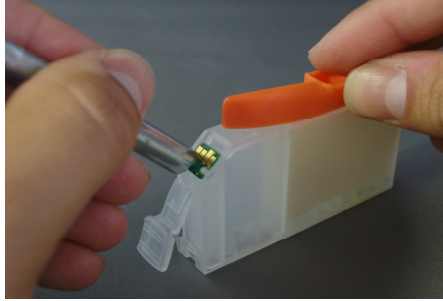

4. If the chip is loose, remove it and then use a **SMALL** amount of super glue or equivalent on the backside of the chip to keep it in place. **CAUTION:** Do not get any glue on the gold pads. If the chip snapped in place you will not need any glue.

**WARNING:** If you insert a cartridge that does not have a chip on it down into the cartridge holder, the small metal fingers that normally make contact with the chip will get caught inside the cavity for the chip. Then when you pull the cartridge out, these fingers will get bent and the printer will be ruined. **DON'T DO THIS.**