

Refill Instructions: Brother LC61, LC38, LC16, LC970, LC980, LC67 and LC1100 Cartridges



Figure 1

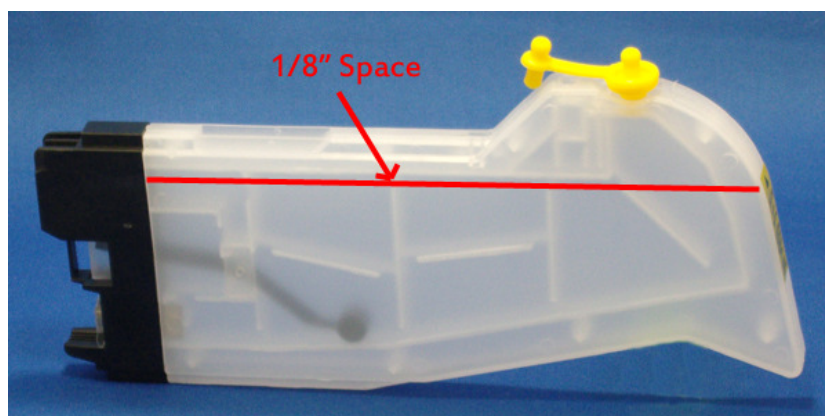


Figure 2

Funnel Fill Instructions:

1. Remove Fill Plug (Figure 1)
2. Insert funnel and carefully pour appropriate color ink into cartridge
3. Leave approximately 1/8" of space from top of cartridge (Figure 2)
4. Reinsert Fill Plug

Syringe Fill Instructions:

1. Attach needle to syringe and load with the appropriate color ink (approximately 10 cc).
2. Remove Fill Plug (Figure 1)
3. Holding the cartridge upright, slowly inject ink into the fill hole.
 - a. Refill syringe and repeat 3 more times (total of 40cc)
 - b. Leave approximately 1/8" of space from top of cartridge (Figure 2)
4. Reinsert Fill Plug.