


Refill Instructions: Epson 7900, 9900, 7890, and 9890 Funnel Fill Cartridges

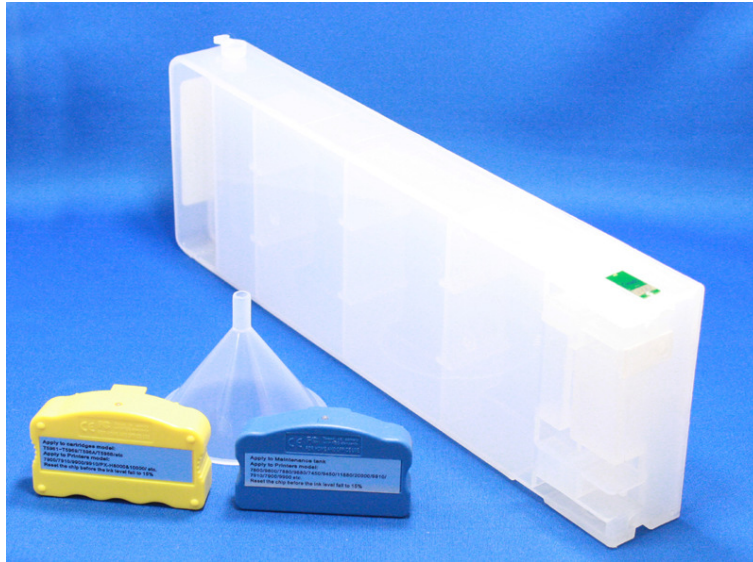

Epson Funnel Fill

Refill:

1. After ink is first placed in the cartridge, cartridges should always be handled in the same orientation as when they are installed in the printer.
2. Remove the cartridge from the printer and place it on paper towels or newspaper.
3. Take out the rubber plug exposing the filling hole. Be careful not to damage the plug. Do not remove the plug while the printer is in operation or powered on.
4. Insert the funnel, choose relevant color ink, and **slowly** pour ink into cartridge until ink level is parallel with the "upper ink line" marked in plastic on back edge of the cartridge. Once filled replace the plug in the fill hole.
5. Using the SK179 Chip Resetter (included in the refill kit), reset the cartridge before inserting in the printer. The SK128 Chip Resetter is for resetting the maintenance tank.