

## Refill Instructions: Canon CLI-8 and PGI-5 Empty Cartridges



Figure 1

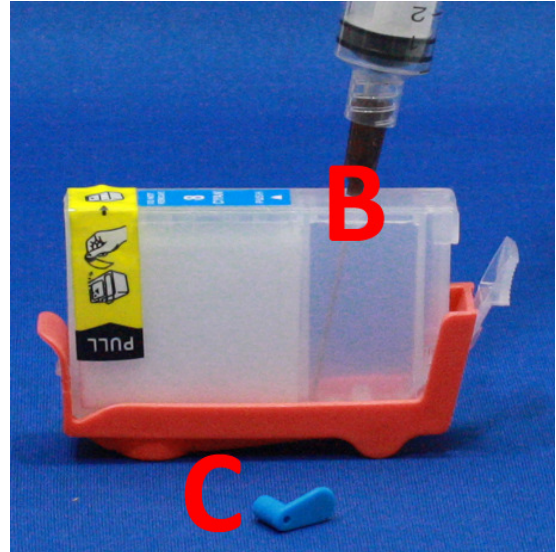


Figure 2

### Preparation:

- MIS Refill Kit
- Newspaper or Paper Towels
- A work area or bench
- Rubber gloves from the kit (bleach and water will take ink off your hands)

### Filling:

1. Attach the needle to the syringe and load it with 10-12cc of ink
2. Remove the Fill Plug as shown in Figure 1 (A)
3. Insert the needle and slowly inject ink as shown in Figure 2 (B)
  - a. It is best to angle the needle toward the sponge and allow time for the sponge to soak up all the ink. Let the cartridge sit if necessary.
4. Replace the Fill Plug, Figure 2 (C)
5. Remove the Yellow Pull Tab, Figure 1 (D), and the Orange Clip before installation.