


Refill Instructions: PGI-225 and CLI-226 Cartridges

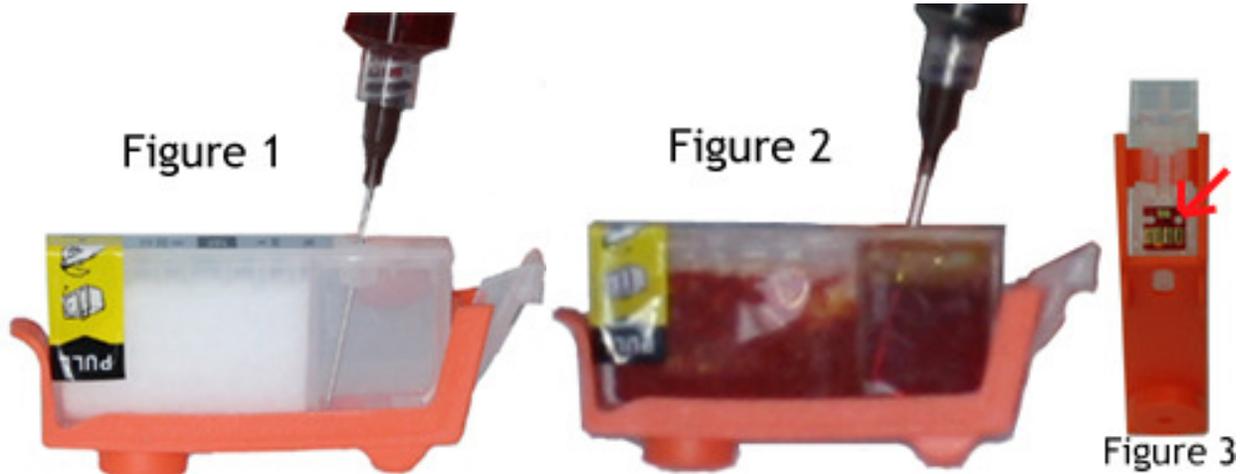

Refill:

1. Remove the plug from the first cartridge you wish to fill
2. Attach the needle to the syringe and draw 8 cc of ink into the syringe (16 cc of black pigment for the larger black cartridge)
3. Place the syringe at an angle inside the fill hole with the bottom of needle toward the cartridge sponge (Figure 1) and SLOWLY begin filling until 1/8" of air remains in fill chamber (Figure 2)
 - a. Replace the fill plug
 - b. This ensures the sponge fills before the chamber
 - c. Clean the syringe/needle with warm water (no soap) after every refill to prevent contamination
4. Repeat Steps 1-3 until each cartridge is full
5. Remove OEM cartridges from printer

6. Find the microchip on the OEM cartridge and using a razor blade, carefully cut the top of the right plastic peg off, slide the chip to the right and off (Figure 3)
 - a. **IMPORTANT:** *Each OEM chip is color specific and must be replaced on the same color replacement cartridge.*
 - b. On the replacement cartridge, slide the OEM chip onto the left plastic peg, then push the right plastic peg into the right hole on the chip

7. Remove the yellow pull tabs and orange clip on the replacement cartridges and insert the cartridges into the printer.
 - a. Retain the orange clips for future refills

8. Print at least 3 purge sheets to work ink through print head.
 - a. Purge sheets can be found at <http://www.inksupply.com/purging.cfm>
 - b. Download the .zip file and use 'Purge4'